



**STEP ONE** Remove everything from the left side. NOTE where the circle is highlighting the identification number. Use some sandpaper or a fine file to smooth the surface. Clean the bar so it is free from dirt or glue.

**NOTE:** The marking may be in different locations depending on brand.



**STEP TWO** Place the two sleeves on the bar in the approximate location that the perch will be. Squeeze the outside with a pair of pliers while protecting the sleeves with cardboard or a rag.



**STEP THREE** Slip the perch over the sleeves. If it barely slips on you are ready for step eight. If the perch fits loosely, you will need to add a shim under the sleeves. Start with the thin (1 mil) shim. Repeat steps four through seven until the correct fit is achieved.




**STEP FOUR** Place the shim on the bar and line up the edge of a sleeve with the end of the shim. Compress the shim under the sleeve.



**STEP FIVE** Take the second sleeve and "squeegee" the shim around the bar.



**STEP SIX** Squeeze the sleeves together while compressing the shim underneath.

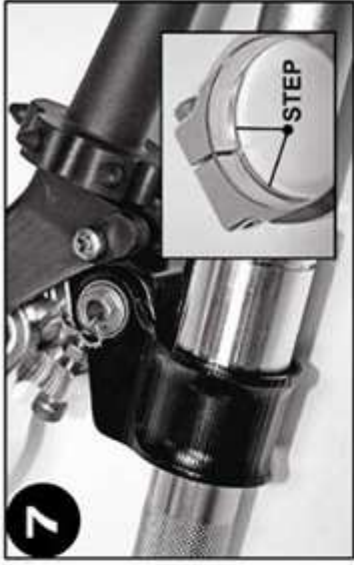

**STEP SEVEN** Keep going thicker on the shim until the perch will not slide on. You will use the previously installed shim.

**NOTE:** The step on the inside of the clamps. This step registers with the grooves in the sleeves.



**STEP EIGHT** Remove the sleeves and slide a clamp on the bar with the step facing outward. Replace the sleeves and pry the clamp as shown (6mm - 1/4" gap) to get it over the sleeves. DO NOT GET ANYTHING NEAR THE GAP AS YOU DO THIS, YOU MAY BE PINCHED AND IT IS PAINFUL.



**STEP NINE** Lubricate the threads, install, and snug the screw in the inner clamp.